

Reptile Basics, Inc
 Economy Rack
 Assembly Instructions

Order tubs from:
 reptilebasics.com
 VE 108-8
 VE 108-11
 VE 108-23

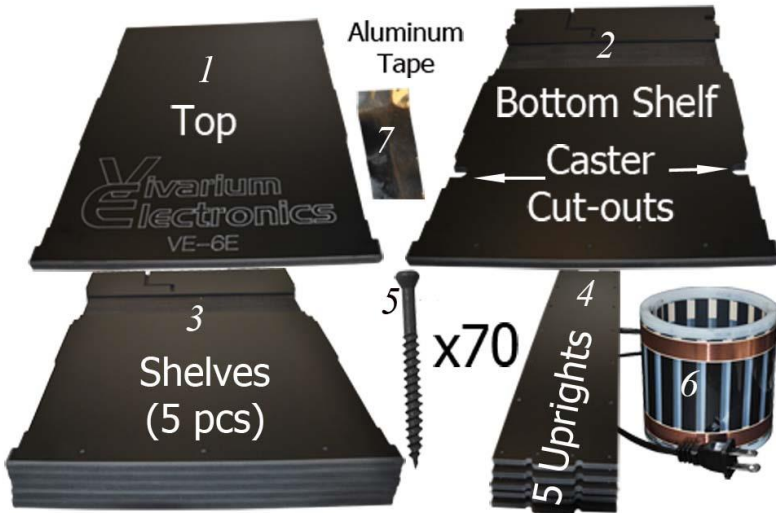


Figure 1



Figure 2



Figure 3

Figure 4



Figure 5



Figure 6

Figure 7

Parts List: (Figure 1)

1. Top (1 pc)
2. Bottom Shelf (1 pc)
3. Shelves (5 pcs)
4. Uprights (5 pcs)
5. Screws (70 pcs)
6. Heat Tape with Power Cord
7. Aluminum Tape

1. Identify the parts listed above and lay them out. Set the Top Panel aside. It will be the last piece to be installed.

2. Locate The "Top" (1) and the "Bottom Shelf" (2) with caster cut outs.

3. Locate one "Upright" (4). Notice the "foot tab" and "receiver slot". The "foot" (figure 2) will be oriented to the bottom of the rack. Locate the "Bottom Shelf with Caster Cut Outs" (2) The heat tape recess (Figure 3) will be oriented up when assembled.

4. Align the front (the end that does not cover the heat tape recess. Heat tape will be installed before installing the rear side uprights) alignment recess (Figure 4) on one side of the bottom shelf with the lowest alignment recess of on the upright. Make sure the recesses are aligned and seated, then screw them together with the screws provided. Be careful to keep the screws perpendicular to the upright to avoid run out. Do not seat the screws any deeper than flush with the skin of the plastic. (Figure 5)

5. Locate one of the 5 shelves. Attach this shelf aligned with the 2nd recess from the top as pictured.(Figure 6) Attach the remaining shelves as pictured. (Figure &Note: the order the shelves are attached should be based on what works best for you, but the bottom shelf with the caster cut out must be installed in the bottom position and the "Top" should not be installed until the heat tape is in place.

6. Install the back center upright making sure that recesses are correctly aligned and screws are straight. (Figure 8)

7. Install the other front upright as pictured. (Figure 9)

8. You are ready to install the heat tape. Begin by sliding the heat tape in the recess as pictured. (Figure 10) Make sure the clear edge of the heat tape is captured by the retention ledge on each side. Once though the first self, loop around to thread it through the next shelf as pictured. (Figure 11)



Figure 8



Figure 9

Continue through all 6 shelves. Note: There is no “Top” or Bottom” with heat tape. Both sides heat equally well and will alternate between shelves when installed.

9. Once the heat tape is threaded through all shelves you can install the last 2 uprights. (Figure 12) The power cord end of the heat tape should be positioned as shown. (Figure 13)

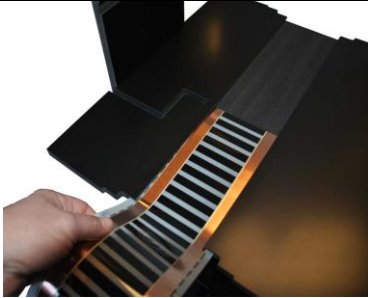


Figure 10



Figure 11

10. Snap top into place. You may need to loosen the screws on the top shelf. Screw the top into place. (Figure 14)

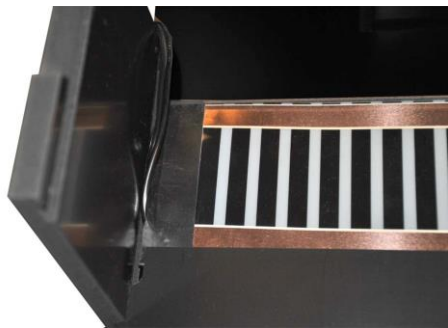


Figure 12



Figure 13

Now you are ready to put your tubs in place and set up your thermostat. The thermostat can be installed on any shelf, but placing it on one of the center shelves works best.



Figure 14



22.44" L
4.92" W
4.25" H



22.44" L
7.36" W
4.25" H



22.44" L
14.76" W
4.25" H

Choose from 3 tub sizes:

VE 108-8

VE 108-11

VE 108-23